



## ANTI STAIN & GERM PROOF EPOXY GROUT FOR FLOOR & WALL

### BENEFITS

- For Tile Joint Width 2-12mm • Recommended for High Foot Traffic, Hygiene Sensitive and Wet Areas like Kitchen, Bathroom, Balcony, Swimming Pool, Spa, Water Tank, Restaurant, Hospital, Shopping Mall, School, College and Factory. • Easy To Apply & Easy To Clean • Stain & Chemical Resistant • Bacteria and Fungal Resistant • Water & Shock Proof • Crack & Shrink Free • Highly Durable • For Interior and Exterior application • Suitable for all types of Tiles & Stones


### SPECIFICATIONS

|              |   |
|--------------|---|
| Colour       | 36+ Colours available ( Refer Colour Chart)   |
| Mixing       | ADICRETE EP - 100 is a factory packaged three component kit containing Part A Resin, Part B Hardner & Part C Colored Grout Powder in 2:1:7 ratio to be mixed as per the recommended procedure during application. |
| Coverage     | Depends on Tile Size, Joint Width & Depth ( Refer Coverage Chart)   |
| Pot Life     | 45 mins   |
| Foot Traffic | 48 Hours  |
| Full Cure    | 7 Days  |
| Shelf life   | 24 Months from the date of Manufacturing when stored in a cool, dry environment away from sunlight.   |
| Packing:     | 1Kg - Part A Resin 200g + Part B Hardner 100g + Part C Colored Grout Powder 700g<br>5Kg - Part A Resin 1Kg + Part B Hardner 500g + Part C Colored Grout Powder 3.5Kg  |


### PRECAUTIONS

- Keep the Grout applied surface covered and protected from dust and traffic for minimum 48 Hours of application.
- Acid Cleaning only after 7 days of application. • Use Gloves during application. • Keep out of reach of children.
- Avoid prolonged contact with eyes and skin. In case of irritation or direct contact with eyes or Skin, Wash thoroughly and seek Immediate medical attention. Do not Swallow.


### APPLICATION

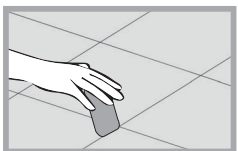

**01.** Remove excess adhesive & debris from tile joints prior to grout application.

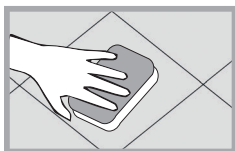

**02.** Using a damp sponge remove stains and dirt from the tile surface.

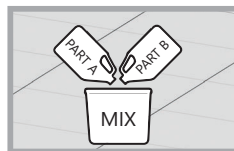


**03.** Mix Part A & Part B fully in a clean jar, Avoid Part mixing.




**04.** Mix both thoroughly using a margin trowel for atleast 1 minute.




**05.** Now Add Part C Powder to Part A+B mixture slowly until the required consistency is obtained.

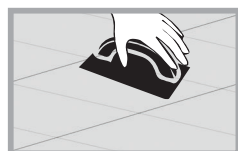


**06.** Using a Rubber Float fill the tile joints with ADICRETE EP-100 Anti Stain Germ Proof Epoxy Grout.

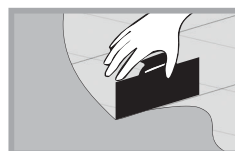


**07.** Draw the Rubber Float perpendicular to tile to fill the gaps and remove all the excess grout on the surface.

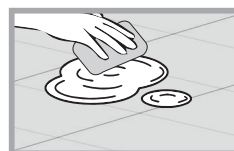

**08.** wait for 30 mins for the joints to harden and then clean the excess in the joints with clean water using a nylon scrubber in circular motion.

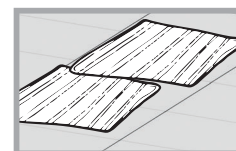

**09.** Wipe the surface thoroughly using a clean wet towel to remove all foreign oily substance on the surface. Frequently change water for better results.

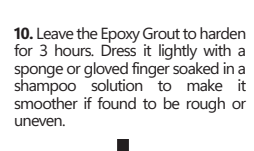

**10.** Leave the Epoxy Grout to harden for 3 hours. Dress it lightly with a sponge or gloved finger soaked in a shampoo solution to make it smoother if found to be rough or uneven.



**11.** To clean Epoxy Haze found on tile surface, clean it with water & shampoo solution after 24 hours of grout application.